




Canon PowerShot SD1300 IS Flash Assembly Replacement

This is a guide which will show detailed instruction on how to properly remove and replace the Canon PowerShot SD1300 IS Flash Assembly.

Written By: Clayton

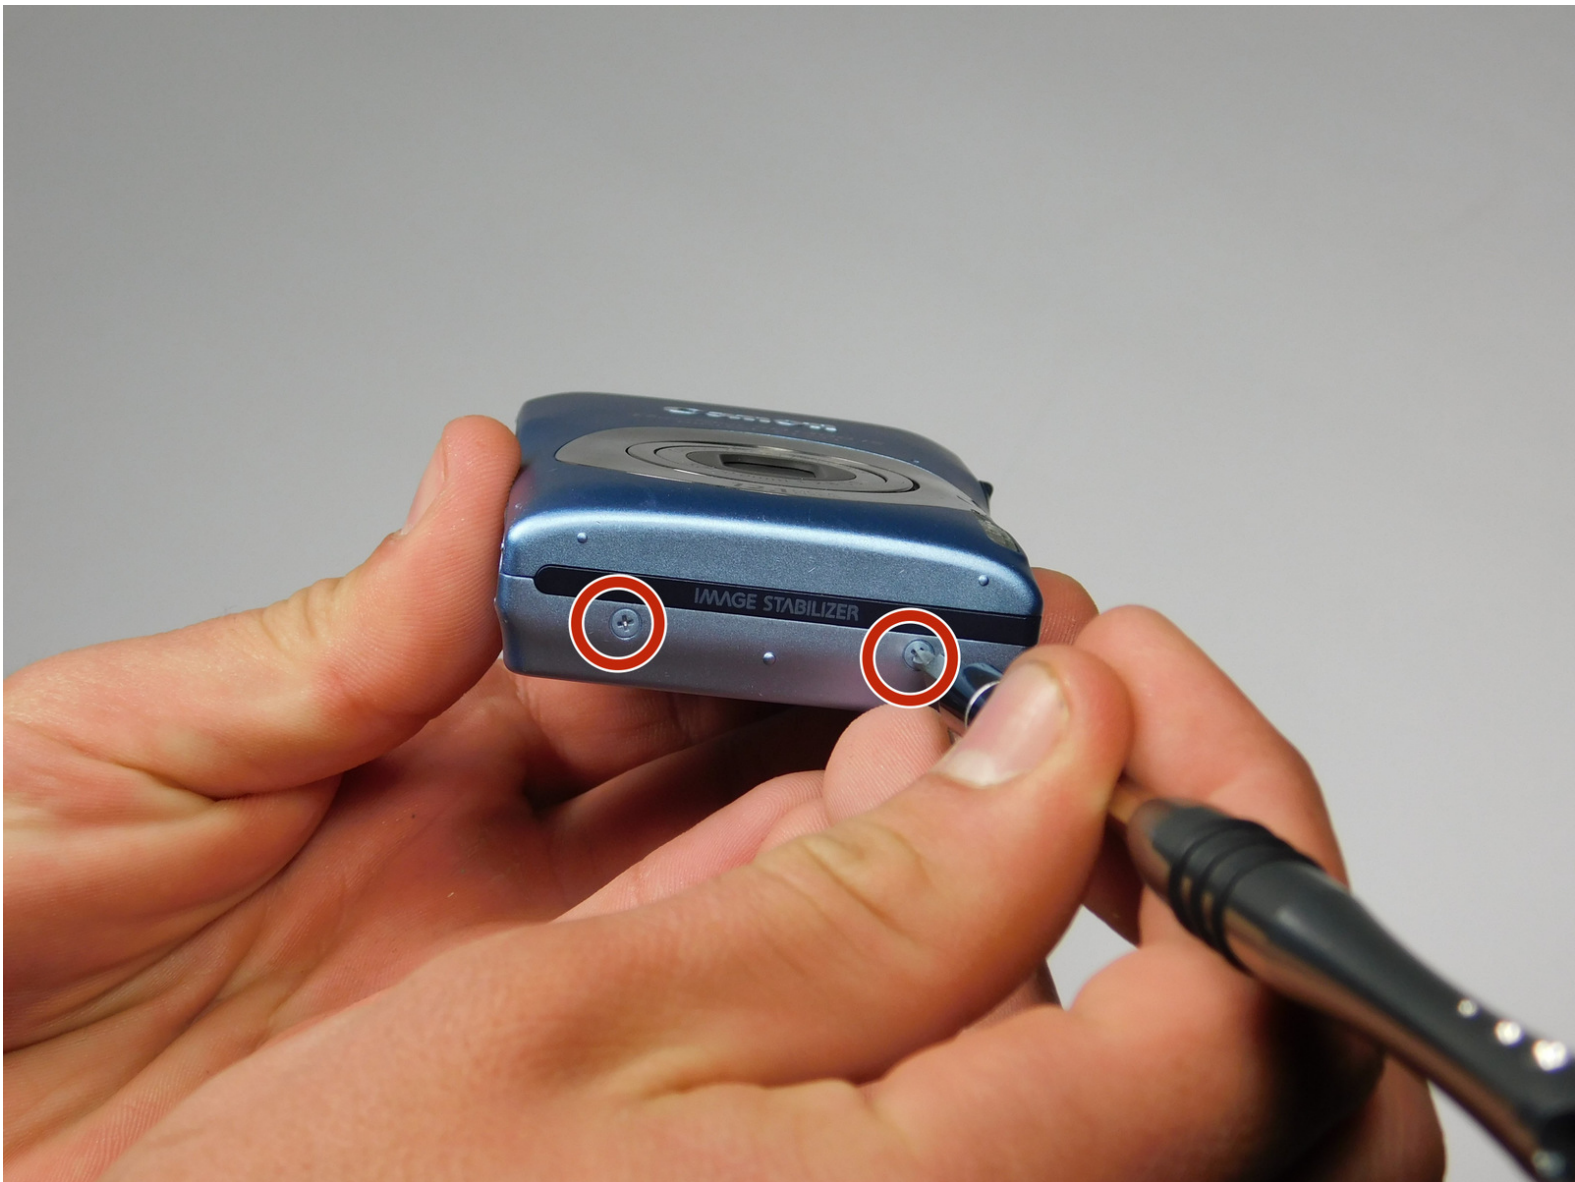

INTRODUCTION

This guide will show you how to properly replace your Flash Assembly on your Canon PowerShot SD1300 IS.



TOOLS:

- [JIS Driver Set](#) (1)

J00

- [iFixit Opening Tools](#) (1)
-

Step 1 — Flash Assembly




- Remove the two 2mm J00 screws on the right exterior.
- Remove a single 4 mm J00 on the bottom exterior.
- Remove a single 3mm J00 on the left exterior.

Step 2



- Once the front shell of the camera is removed the back shell should slide off just the same.

Step 3

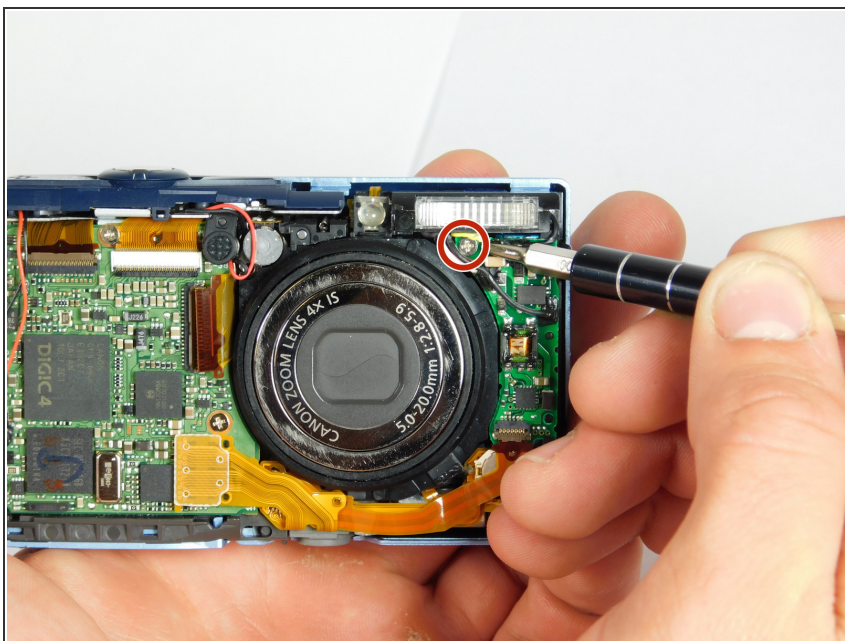


- Remove a 3mm J00 screw from behind wires under the flash.

Step 4



- Use plastic opening tool to remove the screen to gain access to the screws to remove the Flash Assembly.

Step 5

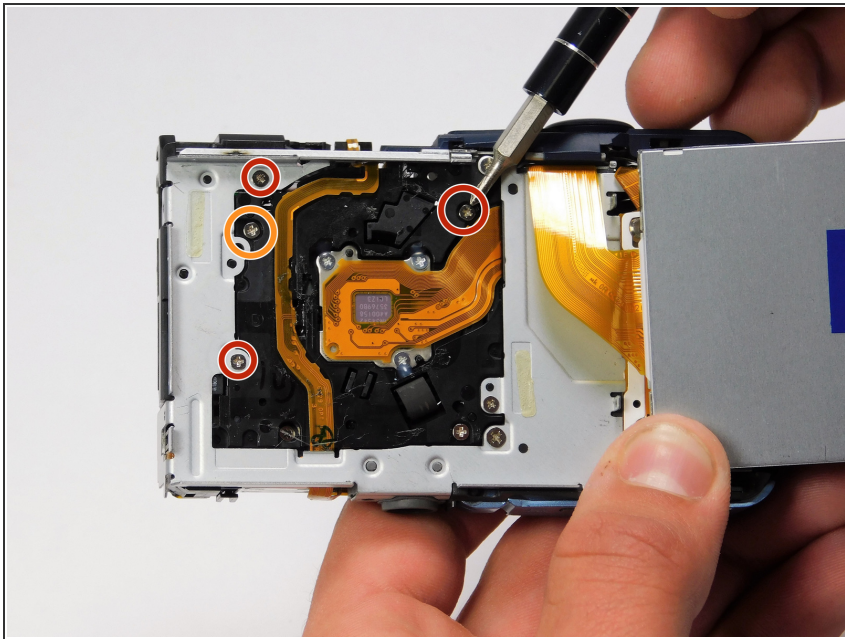

- Remove the two 3mm J00 screws under the screen.
- Remove the 4mm J00 screws under the screen.
- The flash assembly is now released and should be able to be removed from the front side of the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 07:50:50 AM.